

# Rogar

## WINE OPENER

User instructions

Rogar International Corp.  
12700 Oak Lake Court • Midlothian, VA 23112  
Toll Free: 800-351-1420  
Phone: 804-763-0800 • Fax: 804-763-0100  
[www.rogar.com](http://www.rogar.com)



**STEP 1.**  
Start with the handle to the rear as pictured.



**STEP 2.**  
With your right hand, place the bottle between the clamps as high up as it will go.



**STEP 3.**  
Still holding the bottle, squeeze the clamps with your left hand to secure the bottle in place.



**STEP 4.**  
While holding the bottle with the clamps, begin rotating the handle towards you - moving the handle upwards.



**STEP 5.**  
Continue pulling the handle thru the vertical position.



**STEP 6.**  
Rotate the handle down as far as possible. **STOP!** The bottle is now uncorked.



**STEP 7.**  
Still holding the bottle in place by squeezing the clamps with your left hand, take the bottle in your right hand.




**STEP 8.**  
With the bottle securely in your hand, release the clamps and remove the uncorked bottle.



**STEP 9.**  
If the cork is not completely extracted from the bottle, hold the handle (as pictured) and gently twist the bottle and pull it down.

NOTE: Some corks are longer than the industry standard. The wine opener was designed to remove the standard cork.

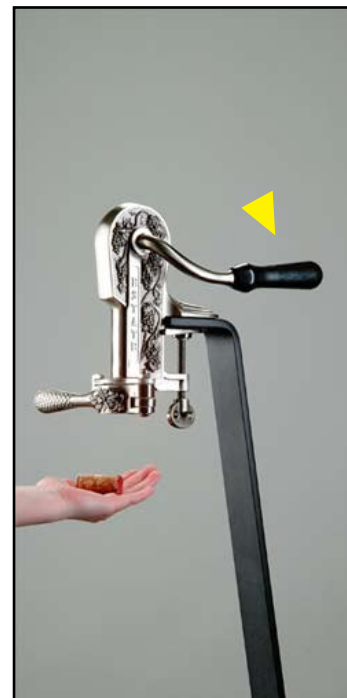

**STEP 10.**  
To remove the cork, rotate the handle to the rear and the cork will drop into your hand. The wine opener is now ready to open another bottle.

## To recork your bottle...



**STEP 11.**  
...should you wish to recork a bottle **ignore STEP 10.** Replace the bottle in the clamps.



**STEP 12.**  
While holding the bottle with the clamps, rotate the handle to the rear.



**STEP 13.**  
When the handle is in the rear position, grab the bottle with your right hand and release the clamps. The bottle is now recorked.